
CL700 CYLINDRICAL LEVERSET

Installation Instructions

2. Install lock assembly

Adjust for door thickness

center of the latch.

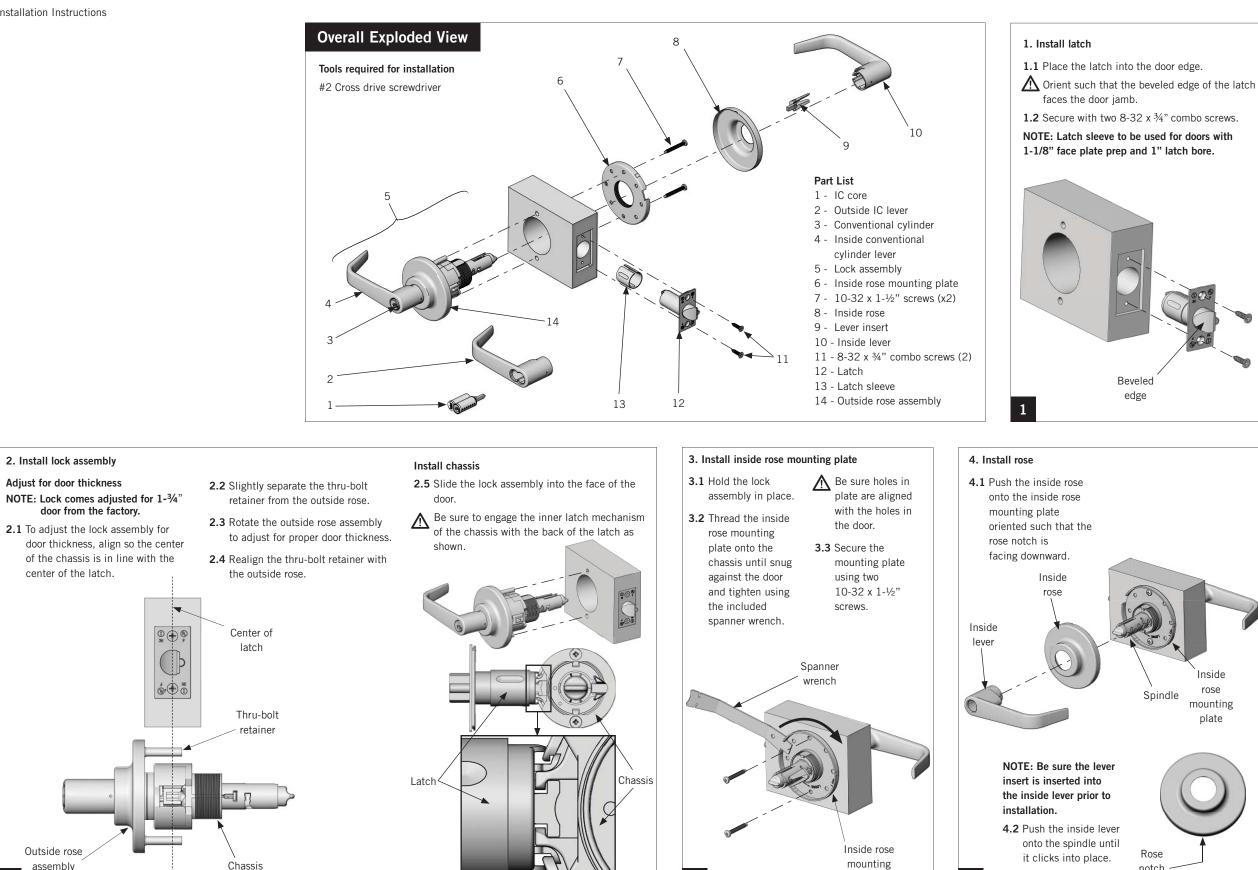

3

4

plate


2

Outside rose

assembly





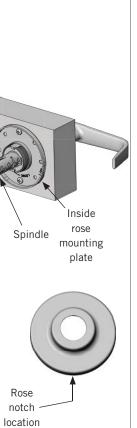


5. Install strike

5.1 Insert strike as shown, and secure with two 12-24 x 1" combo screws.

Strike part list

- 1 Strike plate
- 2 12-24 x 1" combo-screws

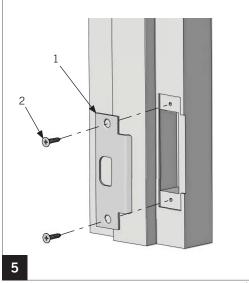


Supplementary Instructions



TIMING INSTRUCTIONS: Install lock on door. Remove outside lever and cylinder (for Interchangeable Core locks, leave levers in place and remove cores and tail pieces)

OUTSIDE OF DOOR:


Rotate key spindle fully counter-clockwise. Install cylinder and lever. (See steps 4 & 5 in section III.)

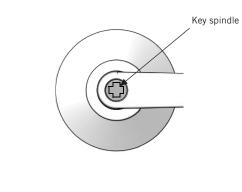

II. Removing & reassembling interchangeable core lever


Removal


- **1.** Insert the control key into the IC core, rotate the key 15° clockwise, and remove the core and tail piece from the lever.
- **2.** Using a flathead screwdriver, retract the lever catch inside the spindle and remove the lever.

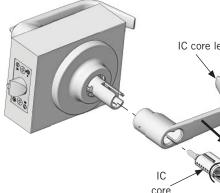

Reinstallation

- **3.** Press the lever onto the spindle until it snaps into place.
- 4. Install the tail piece on the core. Insert the control key into the core, rotate the key 15° clockwise, push the core fully into the lever and turn counter clockwise 15 ° (home position), and remove the key.

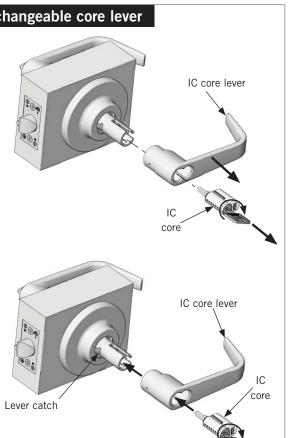

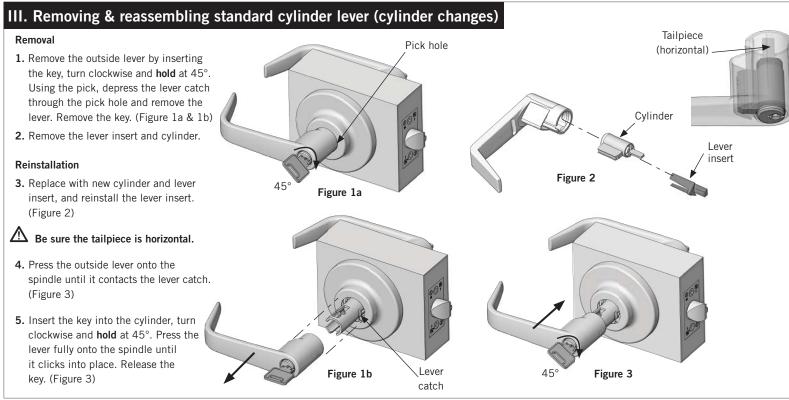

IV. C701 Dummy trim installation

Single dummy trim

- 1. Using the pick, depress the lever catch through the pick hole and remove the lever.
- **2.** Remove the rose from the dummy mounting plate.
- 3. Position the dummy mounting plate on the door with the lever catch facing towards the door edge.
- **4.** Secure to the door using four 8-32 x ³/₄" combo screws.
- 5. Push the rose onto the mounting plate oriented with the rose notch facing downward.
- 6. Push the inside lever onto the spindle until it clicks into place.

