



921016-00

# 210DT/EO/NL

# VON DUPRIN®

TRIM

Installation Instructions

1. Prepare door for exit device. See exit device instructions for holes and center lines.
2. Prepare door for trim:
  - A. Transfer vertical center line from inside (exit device side) of door to outside (trim side) of door. Use extra care if edge of door is beveled. Be sure center line is parallel to edge of door.
  - B. Locate and prepare holes as shown.
3. For NL trim, install cylinder (Figure 1), and install tailpiece guide in exit device cam (Figure 2).
4. Apply trim.
5. Apply device and thru-bolt to trim.

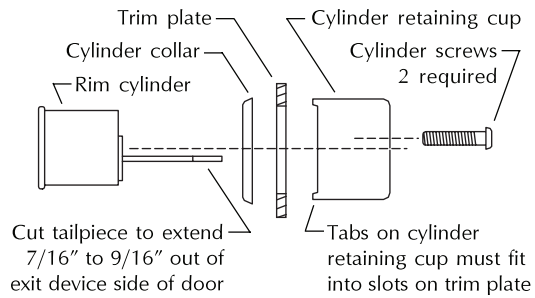


Figure 1


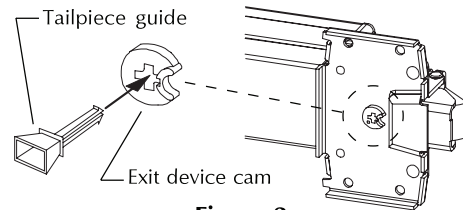


Figure 2

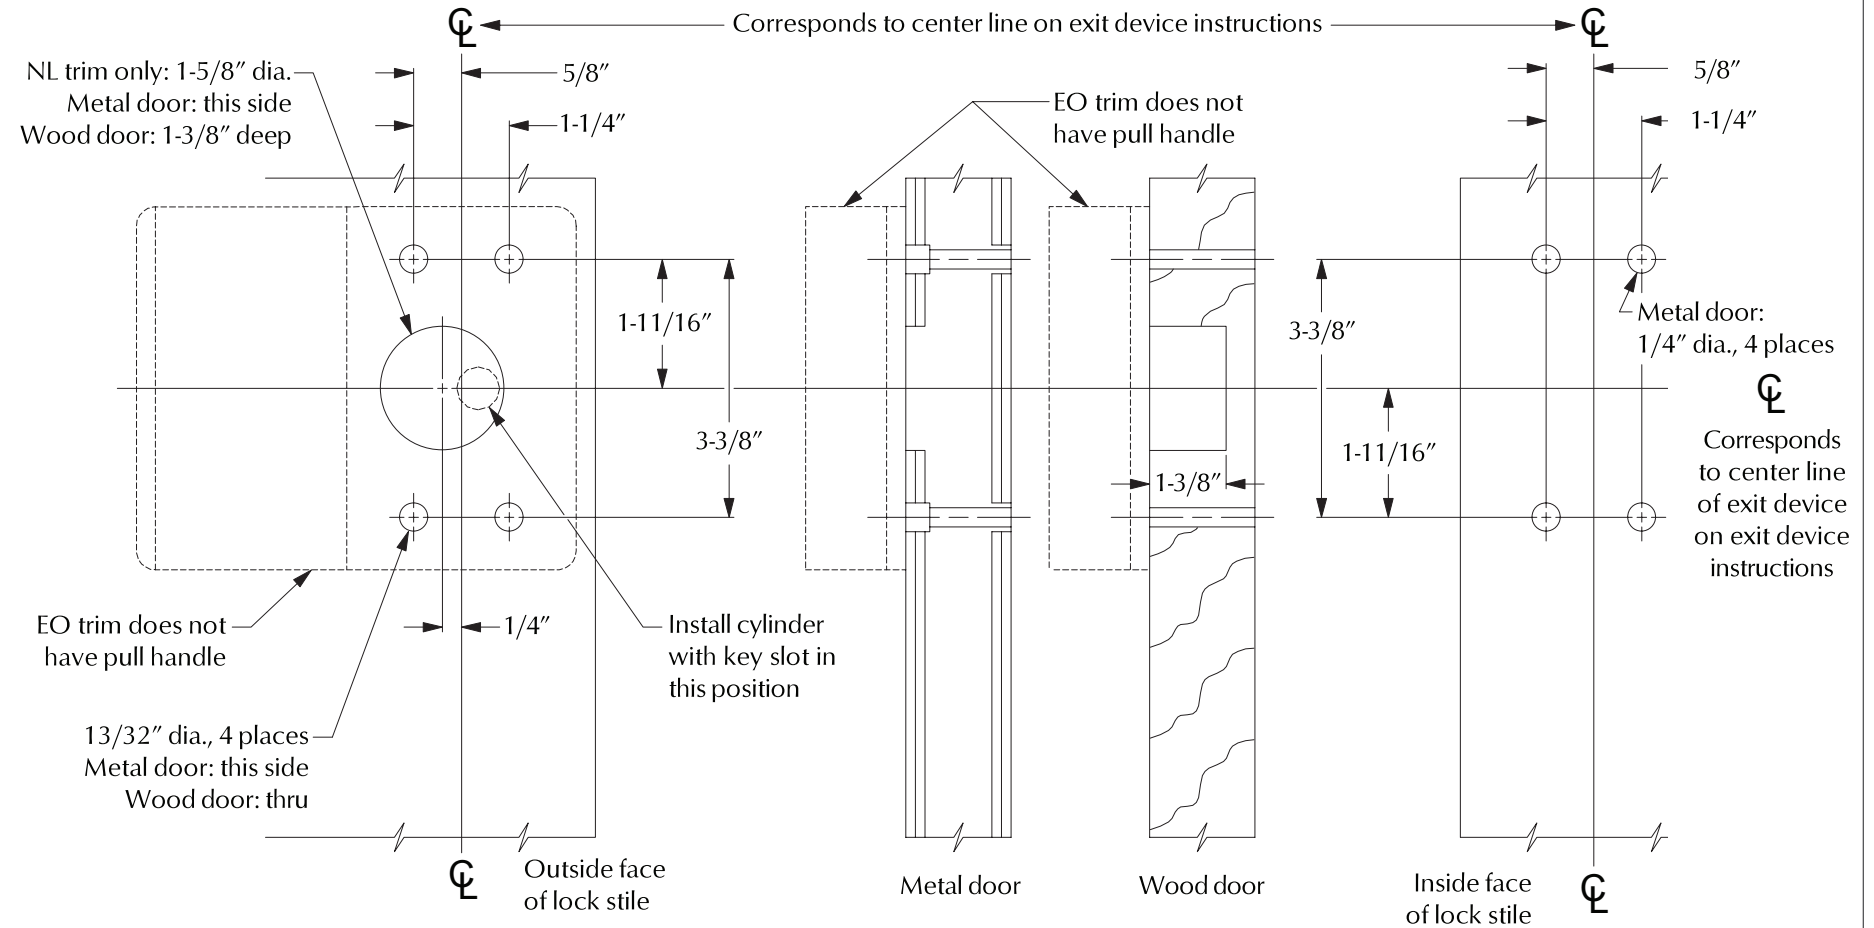

NL trim only: 1-5/8" dia.  
 Metal door: this side  
 Wood door: 1-3/8" deep


EO trim does not  
 have pull handle

EO trim does not  
 have pull handle

13/32" dia., 4 places  
 Metal door: this side  
 Wood door: thru

Metal door:  
 1/4" dia., 4 places

Corresponds to center line  
 of exit device  
 instructions

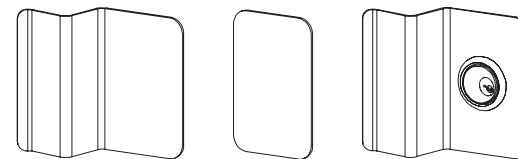

210DT

210EO

210NL

LHR shown  
 RHR opposite

For cutouts on inside face of door, see exit device instructions

Customer Service

1-877-671-7011 [www.allegion.com/us](http://www.allegion.com/us)

